Quick Guide Warning: Before you use the device, make

sure device is worked in below environment, or it can't work properly.				
Don't support	Environment Support	Solutions		
3G/4G signal ≤50%,	1, User can connect device to 5 smalto in case 1-2 smartphones are in po area, other smartphones can still view.			
long delay of can t view video.		2, User better to connect smartphone to WiFi when there is WiFi available.		
5GHz WiFi. Device can't connect.	2.4GHz WiFi.	Change to use 2.4GHz WiFi.		
<512KBit/s or too many computers/smartphones in the same network. Delay or can't work.	Upload bandwidth≥512KBit/s	1, Reduce the computers/smartphones quantity connected in the same network. 2, Change to use a bigger bandwidth network.		
iPone/iPad will not receive push notification when 3G/4G network is turned off and battery is low.	iPhone/iPad can always receive push notification when 3G/4G network is turn on.	iPhone/iPad user should always turn on 3G/4G network to be able to receive push notification all the time		
Few Android tablets can not receive push notification.	All iPhone, iPad, Android Smartphones and most Android tablets can receive push notification.	Only use iPhone, iPad, Android Smartphones and most Android tablets to receive push notification.		

























view. For iphone, slide and press '→' to view.





ory card and turn on power. (DO NOT insert or

lo SIM ♥ 11:32 37% ∎⊃	No SIM ♀	11:38	35%	51 9.424 8/5	14.45
All devices +	<	Settings		<	Record se
discover new device >		Demo		Record mod	ie
🕑 Demo	② Device in	formation		Record	manually
	① Time sett	ings		Record	alarm
	Picture ar	nd sound		Record	timer
	O Security :	settings	\rightarrow	Memory car	4
	Cefense :	settings		CD and	
	Network :	settings		So card	capacity
	Alarm set	tings	5	Remaine	ig capacity of S
	Record se	ettings	\supset	Pormat S	U Card
	M Add sens	or			
Device Message Image My	S Firmware	update			
Record settings	5) 95 424 B/s	1445 Record settings	\$24 III D	_	
Record mode	Record mod	e		1	Choos
Record manually	Record	manually		R	ecord'
Record alarm TMinutes >	Record	alarm	1 Minutes	W	hen
Record timer	· Record	timer	1	a l	ress ri
Men Want to empty SD card? If you do	Memory car	d			
Si M	SD card o	apacity	7605M		
R Cancel Confirm	Remainin	g capacity of SD card	7588M		
Format SD card	Format S	D card	>		
	r				



→ ③ → security settings', choose 'RTSP password' to modify

< Settings	Dr R SKB/s	15:09	49% IIID	54 9 , 526 8/s	15:05	49. IID	11 W, 645 B/s	15.05
Device name:6128265 Device ID:6128265	RTSP nastaur	Security settings		<	RTSP settings			
Device information	> Share unlock	Assion		Enable RTSP			Enable RTSP	
C Time settings	>			RTSP pase Onvice car	word-free access	MS client)	ATSP pass	word-free access
Picture and sound	2. Tap 'RTSF	/ Ppasswore	d'	RTSP enci	ypted access be only accessed with right	w RTSP	RTSP encr	ypted access
Security settings	> 1				assword	\frown		Change RTSP passwor
Network settings					1	Change		word must be 8-30 characte
Alarm settings							0	lancel Cont
Record set 1. Tap	Security Settin	g'		3. Ta	ap 'Chang	e passi	word'	
Add sensor	>	<u> </u>						
Firmware update	•>					4. Inp	out the	enew pas
Unbind devices.						Pass	word cters.	must be
						alpha	betic a	and numb
12 Decet	the devie							
12. Reset	the device	;						
	ò		F	Press	and hold	the re	set b	utton
						un til su		







14. Mount on the Wall

relocate the router or the antenna direction to receive the good Wipeater or use the network cable.Make a mounting hole si using of the device. Drill a hole for the wires to

to remove the rain cover screw at the bottom of the device. Remove





and put the device into the back antannea's sticker and stick antenna on the





When the thief open the device, it will have siren alarm, and your phone will receive alarm too. (The tamper alarm will be last for 1 min.)

put wrong WIFI password. Please connect the network cable and input the y my device is offline after I setup to All device? here is delay in showing the state, pls slide down on ?

 2, Make sure the app is running at phone's background, and you haven't force stopped the app in phone's appliction manager. 3, Make sure you had chosen 'OK'to allow app to send you notification when you first install the app. Or check your phone's notification center to enable receiving app's notification. 4, If 2 mobile phones use the same account ID to login at the same time, only 1 mobile phone can receive the push notification alarm ring. So if use 2 mobile phones to connect the device, user should register 2 different account IDs for the 2 mobile phones. 5, Maybe you are using iPhone, but you have turn off 3G/4G signal. iPhone's WiFi connection will intermittently disconnected, if 3G/4G is also turn off user can not receive push notification. So user should keep iPhone's 3G/4G signal always connected to received push notification all the time. Q5. Why some times it takes too long time to connect to video, or fail to connect to video, video delay, video not fluent or video stop? A:1, It is possibly because your mobile phone is using 3G network and at that place the 3G network signal is not good enough and percentage is only 25% or 50%. If 3G network percent is below 75%, it is not good enough to transfer video file, user should change to other place for better mobile 3G signal or change to use WIFI signal. Moreover, 1 device can send push notification ring to max. 5 mobile phones at the same time, user should set more mobile phones to receive the push notification ring to avoid this 3G signal not good at some places problem. 2, Maybe your network upload bandwidth is too small <512KBit/s or too many computers/smartphones in the same network. User should reduce the computers/smartphones quantity connected in the same network or change to use a bigoer bandwidth network. 	 phone to have better sound. 2. iPhones, iPad and most Android phone's sound is good engouh. Only fe Android phone models sound is not good, in this case user can press Button to hear only and press again to talk. Q9. Why the device have noise and echo. A: Possibly because the mobile phone is too closed to the device, move far away and try. Q10.Why I can't open the lock? A: Possibly your connection to the lock is wrong, pls check the lock's signal. Q11. How can I updated my app if I face problem? A: Go to AppleStore and GooglePlay to check app update version to update version. Q12. How can I updated my device if I face problem? A: Pls get in the app and go to ' o ->Settings' and click 'Firmware update to latest version. Q13. Why my Android tablet can not receive push notification? A: Device don't support few Android tablets, pls change to use iPhone, iPa Smartphones and most other Android tablets to receive push notification. Q14. Why I can't send alarm emails? A:1, Maybe you haven't set 'Enable alarm email from device. Q. Maybe your email had switch on '2-Step Verfication'. You should switch Verification in your email's settings to be able to send alarm email from device. Q. Maybe you email had switch on '2-Step Verfication'. You should switch Verification in your email's settings to be able to send alarm email from device. Q. Maybe visitor account hasn't login or open, pls open and login visitor account and ender password or SMTP authorization account and ender password or SMTP authorization was alarm email from device. 			
Q6. Why can't hear the voice clearly, picture delay, voice delay, halt or no sound.	Model Specification			
A: 1, Possibly because network not good and stable, try to change a better bandwidth	Image Sensor	1/4" Color CMOS Sensor		
	Compression	H.264		
2, Possibly there are too many other devices like computers on the same router, pls	Resolution	HD: 1280*720; SD: 640*360; LD: 320*180		
close these devices or change to a bigger bandwith network.	Memory	Optional, Max. 128G.		
3, Maybe the device is too far away from your router, pls put it closer to your router	Lens	Fixed 2.5mm 122°		
or change a stronger signal router or add a WiFi repeater in between.		ULUX (IR ON)/ U.5LUX (Normal)		
Q7. Why Video and voice delay when I mount the doorphone on the villa fencing or far	Night vision distance	Max 2 meters		
outside?	IR-CUT	Optional		
A: Bessibly because the distance and thickness of blocks exceeds the transmitting	WiFiAntenna	10DB		
Fossibly because the distance and thickness of blocks exceeds the transmitting	Size	L55xW40xH129mm		
adility of antenna. User can choose to use a 16DB fixed direction antenna to	Power Supply	DC/AC 8-24V, optional adapter DC 12V500mA		
improve the wireless signal.	Lock Relay Supported Currenct	<3A		
Q8. Why I hear a shrill sound, too small sound or can't hear sound from the	Lock Relay Supported Voltage	"Support all voltage.Suggest to use <36V to avoid electric shock."		
doorphone on my Android phone?	DoorChime Relay Supported Current	<3A		
A 1 Different phone model have different volume. User can adjust the volume of the	DoorChime Relay Supported Voltage	"Support all voltage.Suggest to use <36V to avoid electric shock."		
A. 1, Sincion phono model navo amoroni volumo. Sooi sun aujust ine volume of the	Working temperature	-20 C ~ 50 C		
	IP level	10% ~ 00% to condensation		
		1 15 9.0		