

SIZE:148 x 210mm

## DAB Radio Signal

Please notice that DAB signal can be weaken MUCH depending on the type of building you are living in. (fx. It can be hard to catch proper signal when being in a concrete building.)

Signal can also be different in different areas of the country. Please check your local transmitter to get the best signal in your area.

Vær opmærksom på at det kan påvirke DAB signalet MEGET hvilken type bygning man bor i. Det kan f.eks. være svært at få et ordentligt signal hvis man bor i beton byggeri.

Der er også forskel på hvor god dækningen er i forskellige områder. Tjek nyeste dækningskort på [www.dabradio.dk](http://www.dabradio.dk) under "hvad er digital radio".

 
# DENVER<sup>®</sup>

---


DAB+/DAB band III and FM digital radio  
DAB+/DAB Band III und digitales UKW-Radio  
DAB+/DAB bånd III og FM digital radio  
DAB+/DAB band III and FM-digitalradio  
DAB +/DAB Band III en FM digitale radio  
Radio cyfrowe DAB+/DAB pasmo III i FM  
DAB+/DAB-kaista III ja digitaalinen FM-radio  
Banda DAB+/DAB III y radio digital FM  
Radio FM numérique avec bande III DAB+/DAB  
Radio digitale banda DAB+/DAB III ed FM  
Rádio digital FM e DAB+/DAB banda III  
DAB+/DAB pojas III i FM digitalni radio

## DAB-35

[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

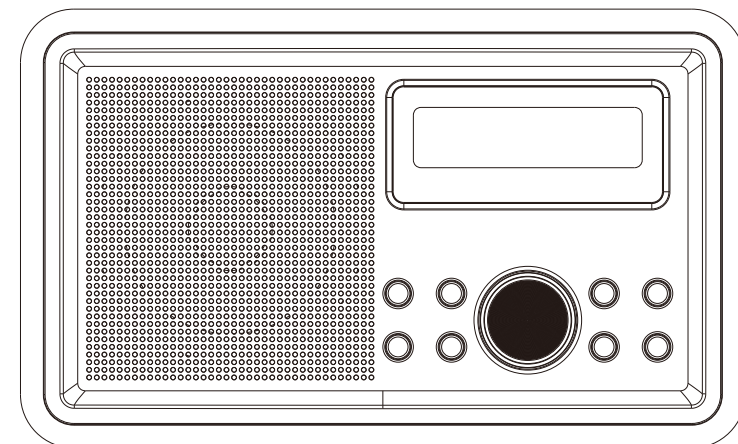

**PARTS**

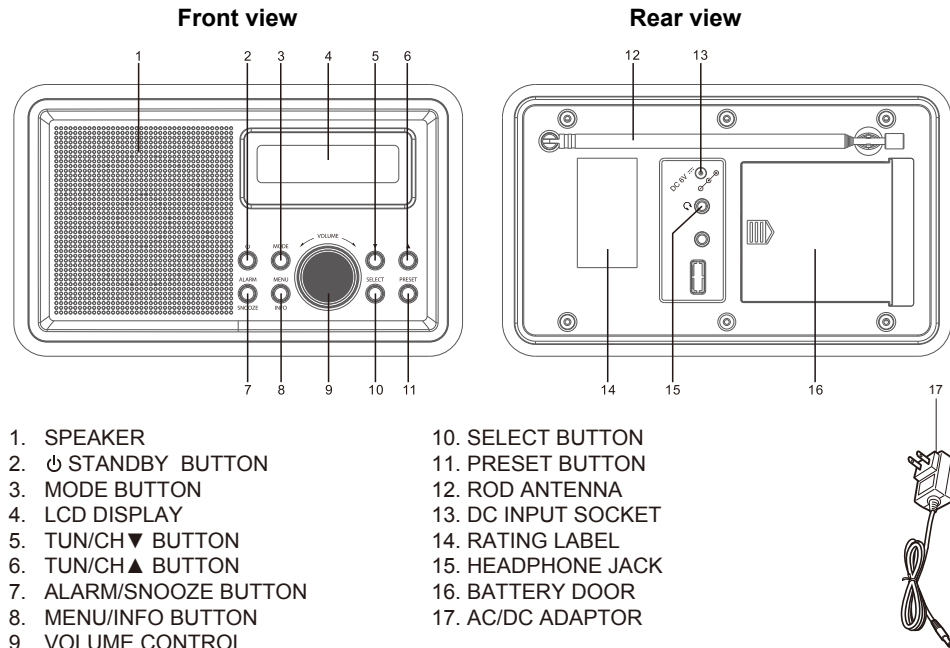 

- |                        |                     |
|------------------------|---------------------|
| 1. SPEAKER             | 10. SELECT BUTTON   |
| 2. ⏻ STANDBY BUTTON    | 11. PRESET BUTTON   |
| 3. MODE BUTTON         | 12. ROD ANTENNA     |
| 4. LCD DISPLAY         | 13. DC INPUT SOCKET |
| 5. TUN/CH▼ BUTTON      | 14. RATING LABEL    |
| 6. TUN/CH▲ BUTTON      | 15. HEADPHONE JACK  |
| 7. ALARM/SNOOZE BUTTON | 16. BATTERY DOOR    |
| 8. MENU/INFO BUTTON    | 17. AC/DC ADAPTOR   |
| 9. VOLUME CONTROL      |                     |

**SWITCHING YOUR RADIO ON FOR THE FIRST TIME**

**AC Operation**

1. Insert the DC power jack of AC/DC adaptor to the DC input socket located at the rear of the radio.
  2. Plug the AC/DC Adaptor to the AC mains outlet.
  3. Press the ⏻ **STANDBY** to turn the radio on.
- Remarks: If the AC Adaptor voltage is over than 6V, it will possible make the line damage.

**DC (battery) operation**

 
1. Ensure the AC/DC adaptor is disconnected from the radio and AC mains.
2. Installed the batteries (4×1.5V UM3/AA battery) into the battery compartment.
3. Press the ⏻ **STANDBY** to turn the radio on.

Remarks: To obtain the best performance in DC operation, the use of alkaline batteries is highly recommended.

**Menus:**

The following controls are used to move about the menu tree to choose and select the required settings:  
 Press and hold **MENU/INFO** button to enter into the "MENU". Press the **TUN/CH▲** or **TUN/CH▼** button to navigate the desire option, then press **SELECT** button to confirm.

**MENU Tree as below:**

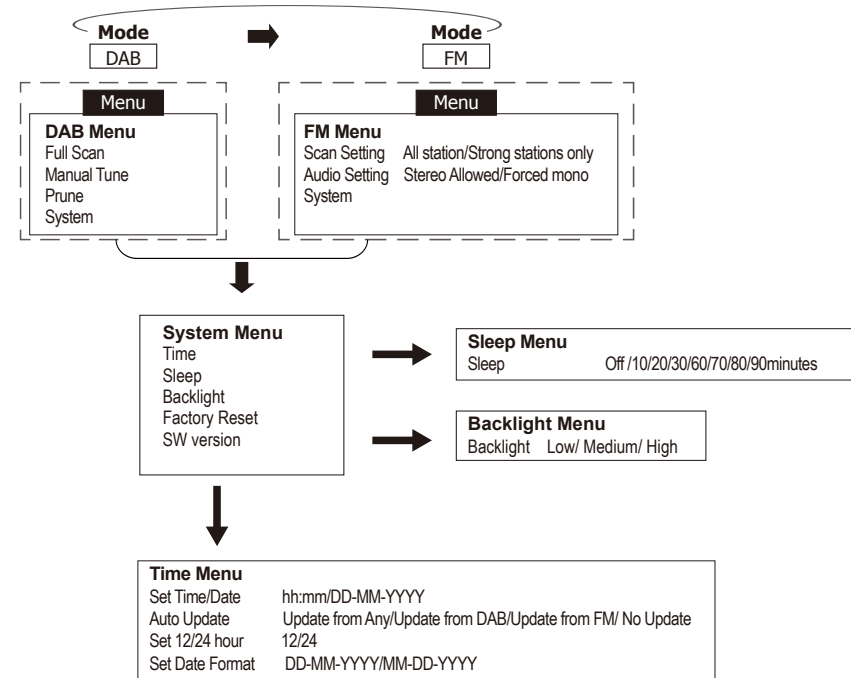

**BASIC OPERATION - GETTING STARTED**

Press the ⏻ **STANDY** button to turn the unit on, it will automatically enter into the DAB mode and perform auto scan function. During the scan, the display show "Scanning..." together with a slide bar that indicates the progress of the scan and the amount of stations that have been found so far. (F.2) Once the scan has finished, the radio will select the first alphanumerically found station. You can now press ▼/▲ buttons to explore the found stations followed by pressing the **SELECT** button to select listening to the stations.

**Note:** If there is no stations found after auto scan, the radio will display "Full Scan", you can now press ▼/▲ buttons to select "Full scan" or "Manual tune" for stations, and press **SELECT** button to finally confirm.



## DENVER DAB-35

### DAB Auto Scan

The auto scan will search for the entire DAB Band III channels, After the scan has finished, the first alphanumerically found stations will be automatically selected.

1. To activate auto scan, press and hold **MENU** button, and press ▼/▲ buttons to enter into the Menu to select "Full scan", finally press the **SELECT** button to confirm. The display will show "Scanning..." and a pressing slide bar.(F.3)
2. All the stations that have been found will be stored automatically, press ▼/▲ buttons to explore the stations that have been found. When you find a station that you would like to listen, press the **SELECT** button to confirm.

### DAB Manual tune

1. To select manual tune, press and hold **MENU/INFO** button, and then press ▼/▲ buttons to select "Manual tune"(F.4). And press the **SELECT** button to confirm.
2. Press ▼/▲ buttons to move through the DAB channels, the display will show "5A to 13F" and their associated frequencies. (F.5)
3. When your desired frequency appears in the display, press the **SELECT** button to listen, the name of the station group (ensemble/multiplex) will be displayed.

F.3

```
  DAB
< Full scan >
```

F.4

```
  DAB
< Manual tune >
```

F.5

```
Manual tune
< 5A 174.928MHz >
```

### FM radio

1. To select FM, press the **MODE** button, the display will show FM and the frequency.
2. To activate auto search, press **SELECT** button or press and hold ▼/▲ buttons until the radio starts to scan the frequency band, the display will show 'Scanning ...'(F6), and it will stop automatically once a station has been found.
3. To search manually, press ▼/▲ buttons in the desired direction to increment the frequency by 0.05MHz. If reception is still poor adjust the position of the antenna or try moving the radio to another location.

F.6

```
92.75MHz
Scanning...
```

### Scan setting

In **FM** mode, press and hold **MENU/INFO** button and then press ▼/▲ buttons to select "Scan setting". And press the **SELECT** button to confirm. Press ▼/▲ buttons to select "All stations/Strong stations only", and then press the **SELECT** button to confirm the setting.

## USING HEADPHONES (not included)

A stereo headphone jack has been provided so that the radio can be used without disturbing others. Plug in the headphones at the point marked 'Ω' and adjust the listening volume to your chosen level. Excessive sound pressure from earphones and headphones can cause hearing loss. The speakers will not operate when earphones are fitted.

## DENVER DAB-35

## RESET

1. If moving the radio to another location in the country the pre-tuned and stored DAB stations may no longer be available and it will be necessary to reset the radio back to the factory settings.
2. With the unit switched on, press and hold the **MENU/INFO** button and press ▼/▲ buttons until the display shows 'System' and press the **SELECT** button and continue press ▼/▲ buttons until the display shows "Factory Reset <No> Yes" and press ▼/▲ buttons to "<Yes>" and press the **SELECT** button. (F.15), (F.16)
3. The radio will display "Restarting..." and will then go into standby mode.

**Note 1:** All stored programmed stations will be lost during reset.

**Note 2:** Use the battery status without reset function.

F.15

```
System
<Factory Reset>
```

F.16

```
Factory Reset?
<No> Yes
```

## TECHNICAL SPECIFICATION

Rated voltage (adaptor)	AC 100 – 240V~ 50/60Hz, 0.3A
Adaptor output	DC 6V = 1A
Rated voltage (radio)	DC 6V (1.5V x 4 AA)
Power consumption	6 W
Audio output	RMS
Radio	DAB 174-240MHz FM 87.5-108MHz
Operating conditions Temperature:	5°C to 35°C
	Humidity 5% to 90%
Unit dimension :	190 (L) × 110(W) × 115 (H) mm
Weight :	0.8kg

 
\*\*\*SPECIFICATION SUBJECT TO CHANGE WITHOUT FURTHER NOTICE.\*\*\*

DENVER DAB-35

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

[www.denver-electronics.com](http://www.denver-electronics.com)

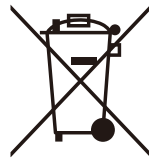

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:  
DENVER ELECTRONICS A/S  
Stavneagervej 22  
DK-8250 Egaa  
Denmark  
[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)