

USER MANUAL

FEBRUARY 2016



Table of contents

Description	3
Features and specifications	3
Plugging in your board for the first time	4
Starting the software	4
Timer operation modes	4
Relay output	5
Description of the timer operation modes	6
Timing sequencer user interface	10

The image shows two overlapping software windows. The 'Timer' window on the left has a 'Connect' button and a 'Connected' status. It lists ten timer modes, with mode 10, 'Programmable timing sequence', selected. Below the list is a timing diagram with three signals: 'Start', 'Reset', and 'Relay'. The 'Relay' signal shows a sequence of pulses with durations labeled t1, t2, t3, and t4. The 'Timing Sequencer' window on the right has a 'File' menu and a 'Relay' dropdown set to 'On'. It features input fields for h, min, sec, and ms (set to 0, 0, 0, 700). A 'Timing Sequence' table is visible, and a 'Relay' timing diagram at the bottom shows a complex sequence of pulses.

Timing Sequence Table:

Timing	Relay	h	min	sec	ms
t13	On	0	0	0	100
t14	Off	0	0	0	100
t15	On	0	0	0	100
t16	Off	0	0	0	100
t17	On	0	0	0	100
t18	Off	0	0	0	700
t19	On	0	0	0	700
t20	Off	0	0	0	700
t21	On	0	0	0	700
t22	Off	0	0	0	700
t23	On	0	0	0	700
t24	Off	0	0	0	700

Let's get started!

Description

No timer is universal, except this one!

2 reasons why this timer is truly universal:

1. The timer comes with a wide variety of operating modes.
2. If the built-in modes or delays don't suit your application, you can simply tailor them according to your needs using the supplied PC software.

Features

- 10 operating modes:
 - toggle mode
 - start/stop timer
 - staircase timer
 - trigger-at-release timer
 - timer with turn on delay
 - timer with turn off delay
 - single shot timer
 - pulse/pause timer
 - pause/pulse timer
 - custom sequence timer
- wide timing range
- buffered inputs for external START / STOP buttons
- heavy duty relay
- PC software for timer configuration and delay setting



Specifications

- power supply: 12 VDC (100 mA max.)
- relay output: 8 A / 250 VAC max.
- minimum event time: 100 ms
- maximum event time: 1000 h (over 41 days)
- dimensions: 68 x 56 x 20 mm (2.6" x 2.2" x 0.8")

Plugging in your board for the first time

First, you will need to plug your VM206 into an available USB port on your computer so Windows can detect your new device.

Then download the latest software version for the VM206 on www.velleman.eu via these simple steps:

1. go to: <http://www.vellemanprojects.eu/support/downloads/?code=VM206>
2. download the VM206_setup.zip file
3. unzip the files in a folder on your drive
4. double click the "setup.exe" file

An install wizard will guide you through the complete installation procedure. Shortcuts to the VM206 software can now be installed.

Starting the software

1. locate the VM206 software shortcuts (programs > VM206 > ...).
2. click on the icon to start the main program
3. then click on the 'Connect' button, the "Connected" label should now be displayed

You are now ready to program the VM206 timer!

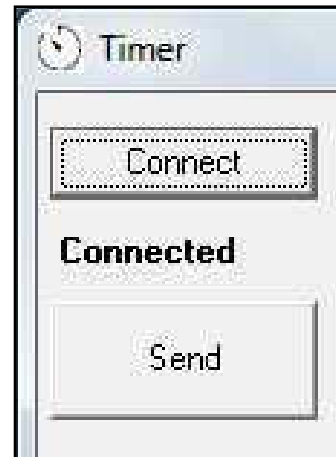


fig. 1

Timer operation modes

- 1: on delay - relay turns on after delay t1
- 2: off delay - relay turns off after delay t1
- 3: one shot - a single pulse of length t2, after delay t1
- 4: repeat cycle - after delay t1, relay turns on for t2 ; then repeats
- 5: repeat cycle - relay turns on for time t1, off for t2; then repeats
- 6: toggle mode
- 7: start/stop timer
- 8: staircase timer
- 9: trigger-at-release timer
- 10: programmable timing sequence

Now you can set up your first timing program for the VM206:

1. select any of the options from 1 to 9
2. enter the time or use the default 2sec and 1sec
3. now click the 'Send' button

The VM206 is now programmed!

You can check the operation by pressing the TST1 (Start) button.

The 'RELAY ON' LED indicates the operation.

You can stop the timer operation by pressing the TST2 (Reset) button.

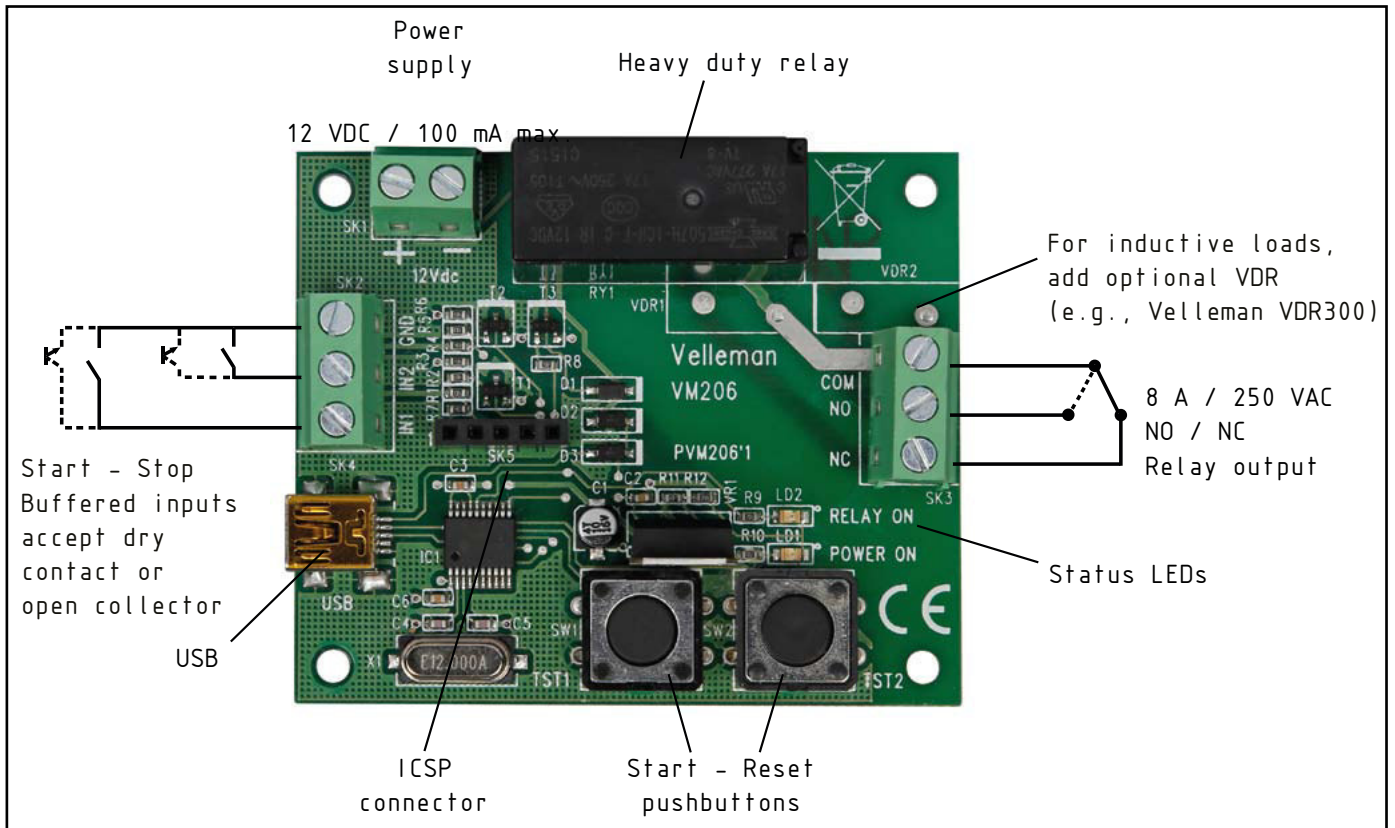


fig. 2

To get the relay functioning as well, you need to connect the 12 V supply to the SK1 screw connector.

You can disconnect the USB cable and test the timer operation as a stand-alone device with the 12 V supply.

There are two inputs on the board; IN1 and IN2 for remote switches or NPN transistors to control the timer operation. The switch or transistor connected between IN1 and GND acts as the Start button (TST1) and the switch or transistor connected between IN2 and GND acts as the Reset button (TST2).

Relay output

The relay contacts are connected to the SK3 connector:

- COM: Common
- NO: Normally Open
- NC: Normally Closed

Space is provided on the board for a transient suppressor (option) to reduce contact wear. Mount VDR1 for suppression of the NC contact. Mount VDR2 for suppression of the NO contact.

Description of the timer operation

1: On delay - relay turns on after delay t_1

Timing begins on the leading edge of the Start signal.

When the set time (t_1) has elapsed, the relay contacts transfer to the ON state.

The contacts remain in the ON state until the Reset signal is applied or power is interrupted.

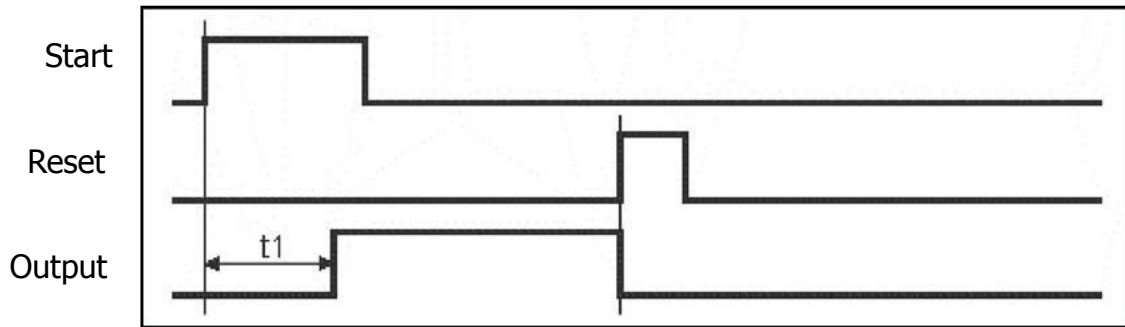


fig. 3

2: Off delay - relay turns off after delay t_1

When a Start signal is supplied, the relay contacts transfer immediately to the ON state.

Timing begins on the trailing edge of the Start signal.

When the set time (t_1) has elapsed, the relay contacts transfer to the OFF state.

The timer is reset by applying the Reset input or by interruption of power.

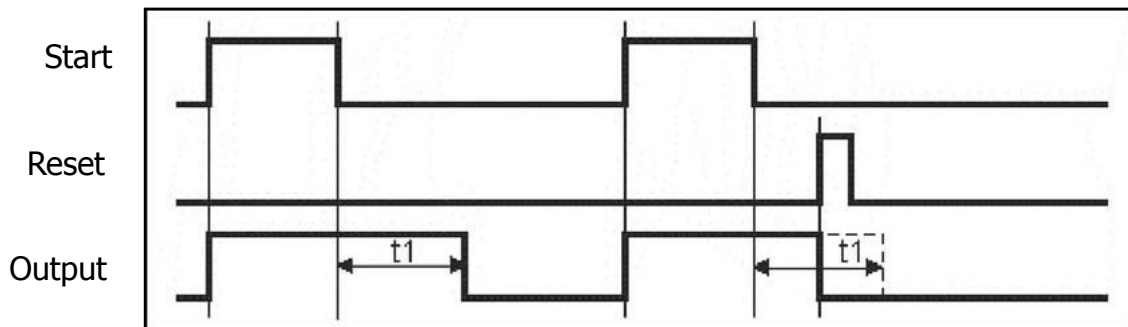


fig. 4

3: One shot - a single pulse of length t_2 , after delay t_1

Timing begins on the leading edge of the Start signal.

When the first set time (t_1) has elapsed, the relay contacts transfer to the ON state.

The contacts remain in the ON state until the second set time (t_2) has elapsed or the Reset signal is applied or power is interrupted.

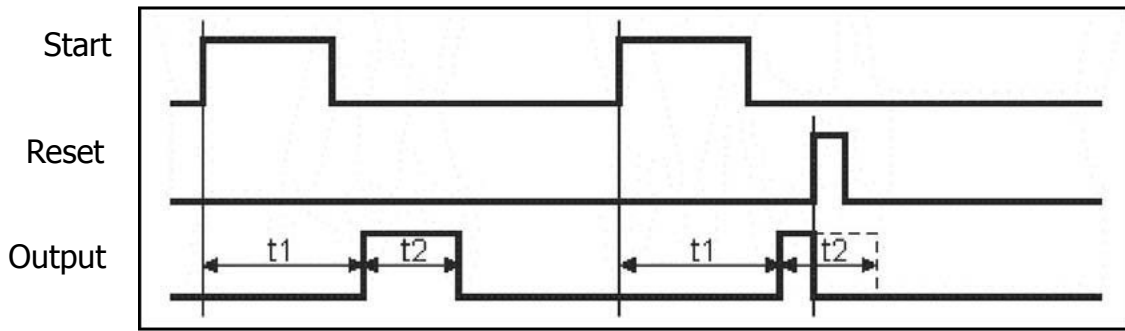


fig. 5

4: Repeat cycle - after delay t_1 , relay turns on for t_2 ; then repeats

Timing begins on the leading edge of the Start signal.

A cycle is initiated when the output will be OFF for the first set time (t_1), then ON for the second set time (t_2).

This cycle will continue until the Reset signal is applied or power is interrupted.

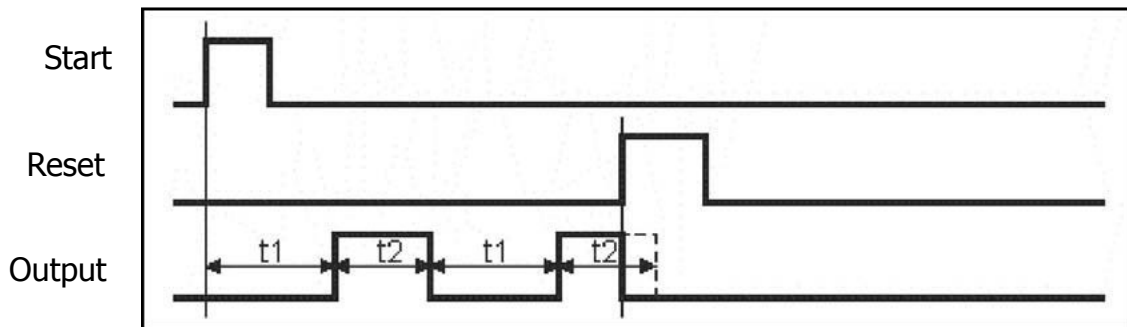


fig. 6

5: Repeat Cycle - relay turns on for time t_1 , off for t_2 ; then repeats

Timing begins on the leading edge of the Start signal.

A cycle is initiated where the output will be ON for the first set time (t_1), then OFF for the second set time (t_2).

This cycle will continue until the Reset signal is applied or power is interrupted.

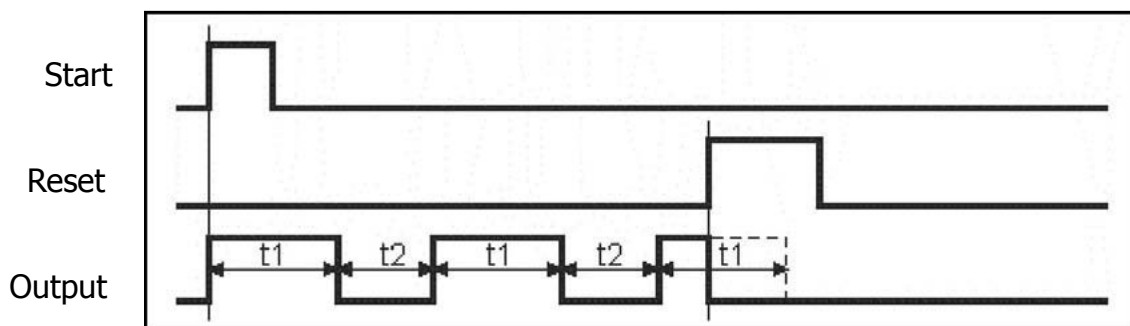


fig. 7

6: Toggle mode

When a Start signal is supplied, the relay contacts transfer immediately to the ON state.

When the Start signal turns ON again, the relay contacts transfer to the OFF state and on the next Start signal to ON state etc.

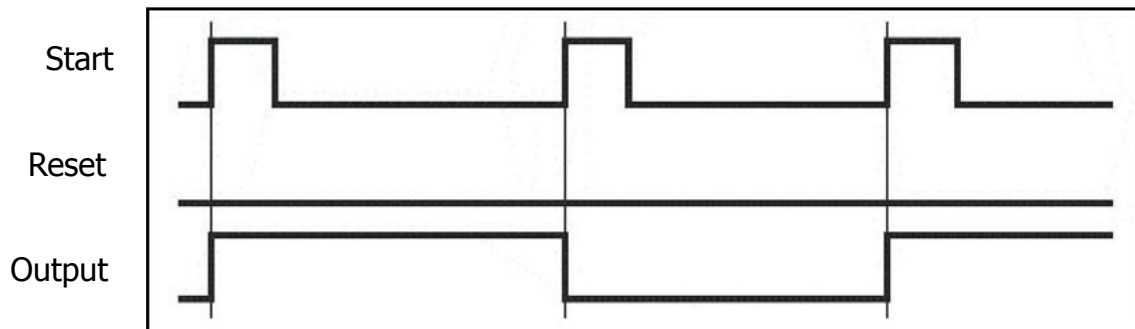


fig. 8

7: Start/Stop timer

When a Start signal is supplied, the relay contacts transfer immediately to the ON state and the set time (t_1) begins.

When the set time (t_1) has elapsed, the relay contacts transfer to the OFF state.

The timer is reset by applying the Start signal before the set time (t_1) has elapsed.

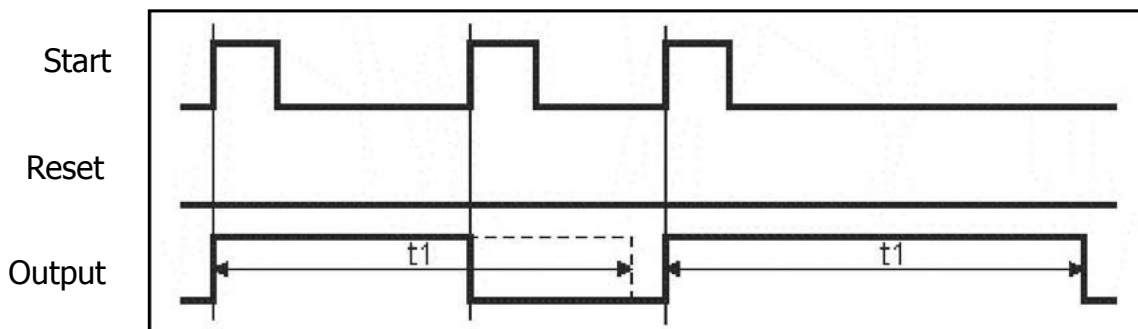


fig. 9

8: Staircase timer

When a Start signal is supplied, the relay contacts transfer immediately to the ON state and the set time (t_1) begins.

When the set time (t_1) has elapsed, the relay contacts transfer to the OFF state.

The timer is reactivated by applying the Start signal before the set time (t_1) has elapsed.

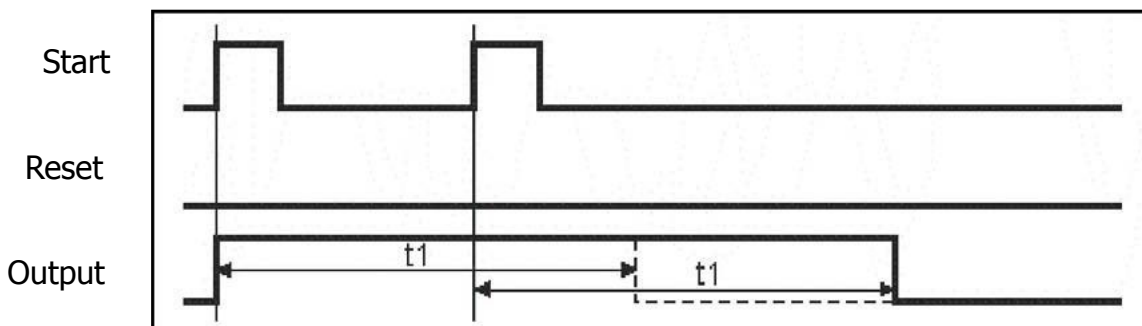


fig. 10

9: Trigger-at-release timer

On the trailing edge of the Start signal the relay contacts transfer to the ON state and the timing begins. When the set time (t_1) has elapsed, the relay contacts transfer to the OFF state.

The timer is reactivated by applying the next trailing edge of the Start signal before the set time (t_1) has elapsed.

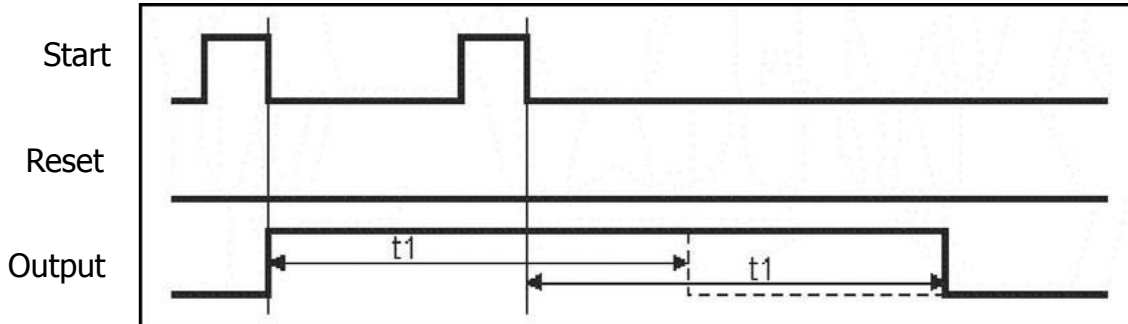


fig. 11

10: Programmable timing sequence

In this mode you can program a sequence of up to 24 timing events.

You can specify the relay state ON or OFF and the duration of each timing event. The programmed sequence can be repeated. You can save the timing sequence to file.

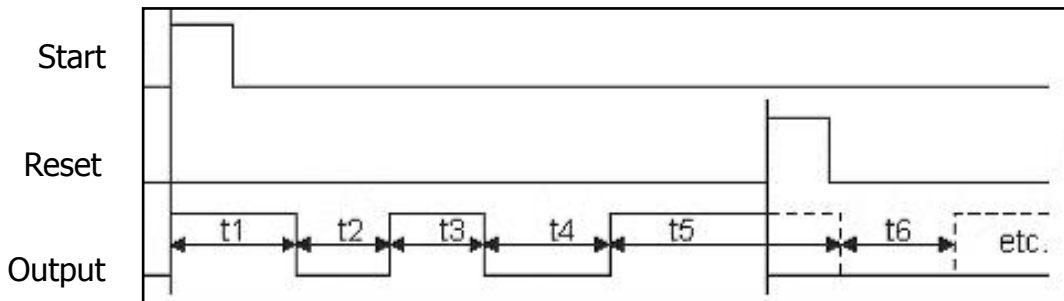


fig. 13

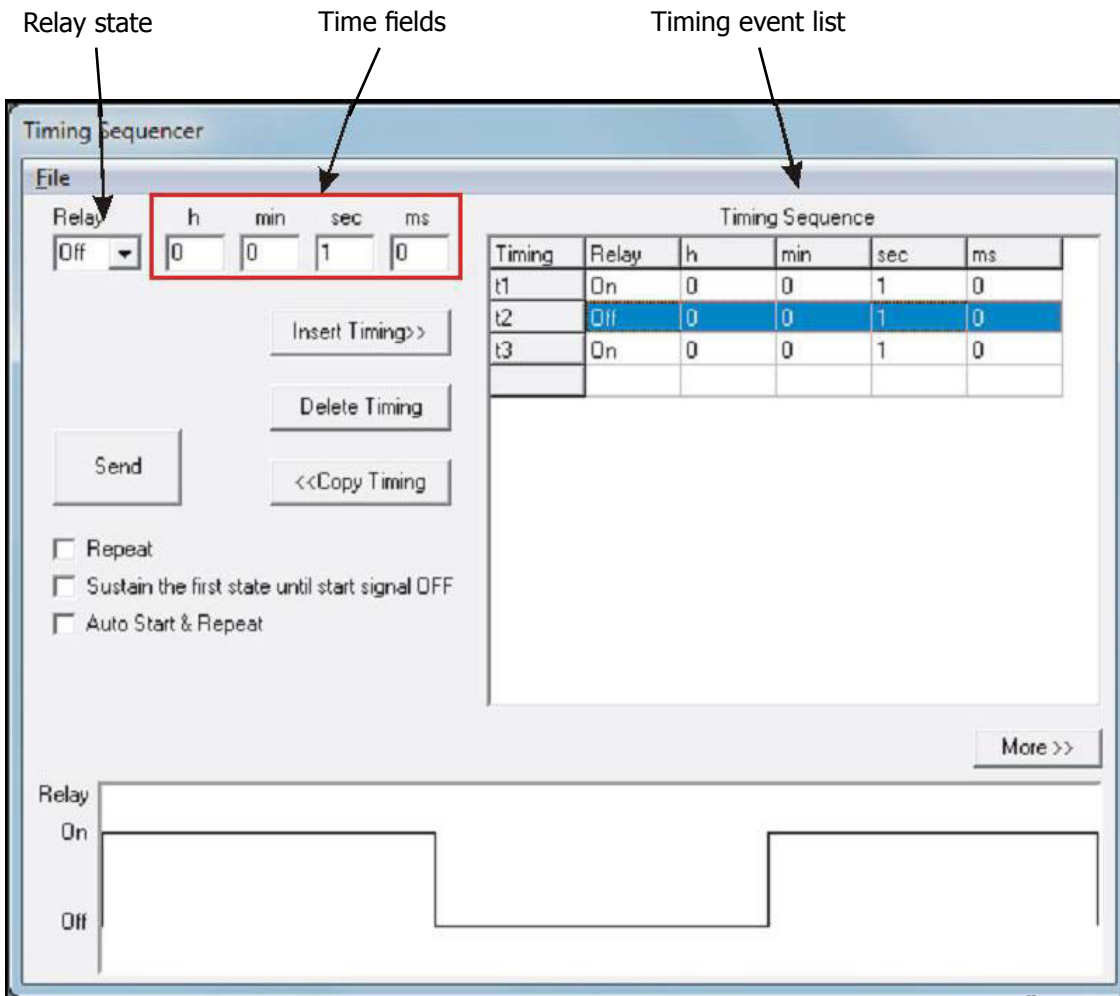


fig. 14

Timing sequence user interface

Options:

- add timing / insert timing
- delete timing
- copy timing
- repeat
- sustain the first state until Start signal is OFF
- auto start & repeat

By selecting the option 'Sustain ...', the relay state of the first timing event is sustained as long as the Start signal is ON or the Start button is kept pressed down.

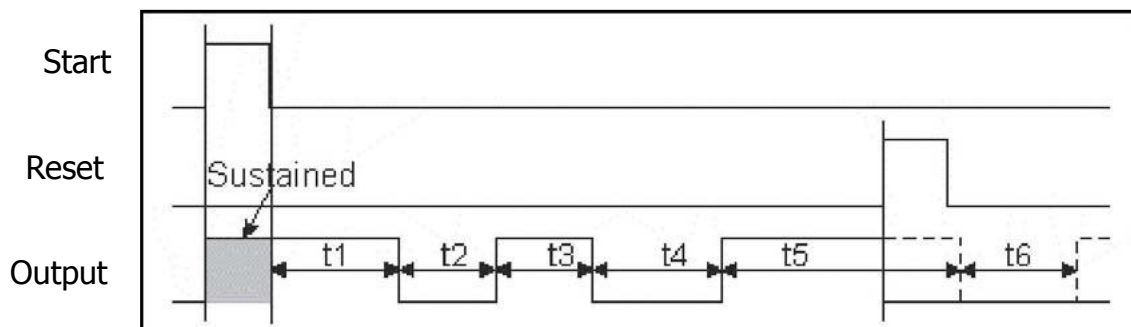


fig. 15

By selecting the option 'auto start & repeat', the timing sequence restarts automatically when the power supply is connected or when there has been a power outage.

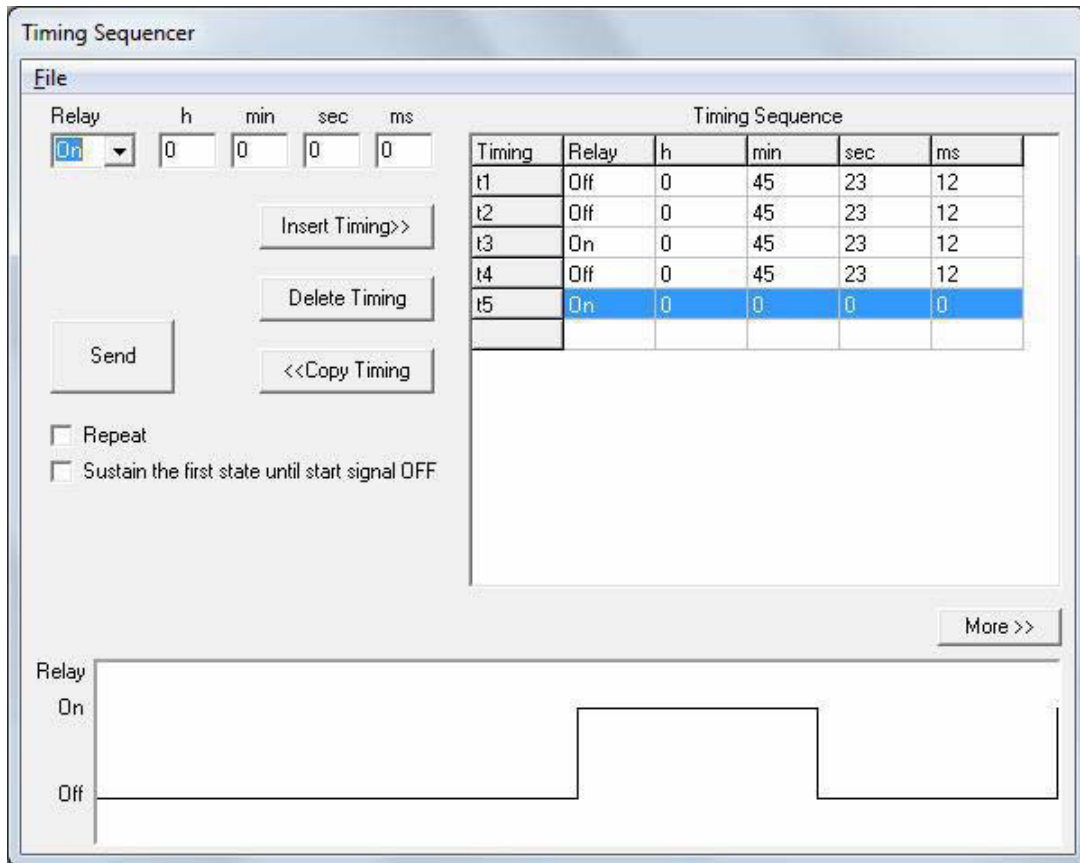


fig. 16

Normally the relay will be OFF after the last timing event of the sequence.
The relay can be forced to stay ON by setting the time of the last 'ON' action to zero.



/Velleman-nv



@Velleman_RnD

Velleman nv, Legen Heirweg 33 - Gavere (Belgium)
Vellemanprojects.com

ORDERCODE: VM206

REVISION: HVM206'1

UPC



EAN

