


Connection diagram of the telephone amplifier build into a mixing panel (K2661 - K2662 - K2663)

K4900

i

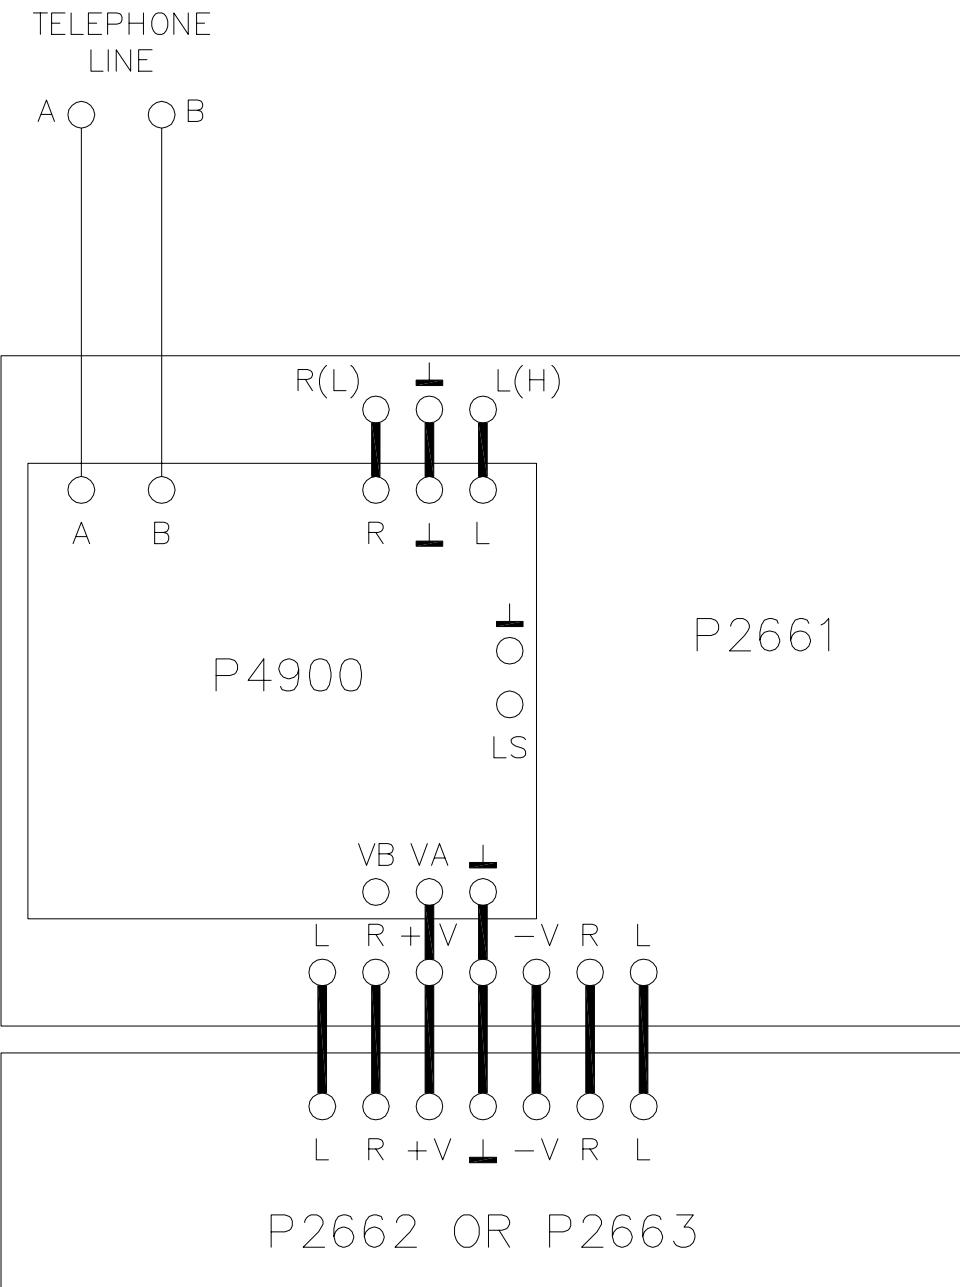

VELLEMAN®-KIT HIGH-Q